


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		MUTE
	Tv/Video		SRC
	Sleep		VOD
	◆ Bright		-/- / EPG
	PIP		WIDE
	Exit		EXIT
	Text		TEXT
	Pre PG		P/C / FAV
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	PG+		CH +
	PG-		CH -
	Vol+		VOL +
	Vol-		VOL -

Originalfernbedienung Ersatzfernbedienung

	Menu/Set		MENU
	V.Size		V-FOR
	MTS		MEDIA
	Sound		Audio
	Picture		Subt.
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Time		TV/R
	Still		OPT+



