



 
 
 

 

 

 

 

 


 
 
 
 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	Text		Text
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Source		AV
	Display		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Exit		Exit		Timeshift		Options
	Subtitle		Subt		Tv/Radio		TV/R
	Index		List				
	Size		Format				
	Reveal		D. Menu				
	Play/Hold		Play				
	Pause		Pause				
	I<</Cancel		I<<				
	>>I/Subpage		>>I				
	Stop		Stop				
	Rec		Rec				
	FAV		Pre Ch				
	<</FAV-		<<				
	>>/FAV+		>>				
	Mix		Smart				
	EPG		Guide				
	Media		Media				

