







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡+]/-/--		Guide
	Recall/Auto/Pre-C		Pre Ch
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +





Originalfernbedienung Ersatzfernbedienung

	P-		Ch -
	[≡..]/Source		AV
	[≡i]/Menu		Menu
	(+)		Media
	[≡?]/Info/[+]		Info
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	TTX/MIX		Text
	[≡o]/Dual I-II		Dual
	[≡◇]		Format
	[≡◇]/Sleep		Sleep
	Red		Red
	Green		Green





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Yellow	 Yellow
 Blue/P.Mode	 Blue

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

