



Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|--------|-------------------------------------------------------------------------------------|----------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | FAV |  | Shift + Pre Ch |
|  | Recall |  | Pre Ch |
|  | Game |  | Media |
|  | Auto |  | Smart |
|  | Info |  | Info |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|-------------------|---------------------------------------------------------------------------------------|--------|
|  | Menu |  | Menu |
|  | EPG |  | Guide |
|  | Exit |  | Exit |
|  | Up / CH + / I<< |  | Up |
|  | Down / CH - / >>I |  | Down |
|  | Right / Vol + |  | Right |
|  | Left / Vol - |  | Left |
|  | OK |  | Ok |
|  | Up / CH + / I<< |  | I<< |
|  | Down / CH - / >>I |  | >>I |
|  | Up / CH + / I<< |  | Ch + |
|  | Down / CH - / >>I |  | Ch - |
|  | Left / Vol - |  | Vol - |
|  | Right / Vol + |  | Vol + |
|  | Red / Zoom |  | Red |
|  | Green / Lan/Audio |  | Green |
|  | Yellow / |  | Yellow |



Play/Pause



Originalfernbedienung Ersatzfernbedienung

| | | | |
|-----------------------------------------------------------------------------------|-------------------|-----------------------------------------------------------------------------------|-------|
|  | Blue / Text |  | Blue |
|  | Red / Zoom |  | Eject |
|  | Green / Lan/Audio |  | Dual |
|  | Yellow / |  | Play |
|  | Yellow / |  | Pause |
|  | Blue / Text |  | Text |
|  | << / Tv/Radio |  | << |
|  | << / Tv/Radio |  | TV/R |
|  | >> / Subtitle |  | >> |
|  | >> / Subtitle |  | Subt |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

