 



 
 
 
 

 
 

 

 
 
 

 
 



 

 

 

 

 
 
 


 
 



 

 
 
 



 

 

 
 
 
 
 

 
 
 

 

 






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	E-Manual	 + 	Shift + D. Menu
	[ ]/Ratio		Dual
	Input		AV
	Tv/Rad		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Q.View		Format

**Originalfernbedienung    Ersatzfernbedienung**

	3D		3D
	Vol+		Vol +
	Vol-		Vol -
	FAV		Pre Ch
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Home		Smart
	Back		Back
	My		D. Menu
	Guide		Guide
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Subtitle		Subt
	Stop/Live Tv		Stop
	T.Opt		Options
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Rec		Rec
	Info		Info
	Simplink		Media
	Saving Energy		Shift + 3D

