






 

 




 




 
 



 
 
 









 

 
 




 


 



 

 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TTX/MIX		Text
	MM		Media
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	Swap		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	[<>]		Format
	Zoom		Eject
	OK/Freeze		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[i]		Info



