


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Tv/Video		TV/R
	Sleep		Sleep
	◆ Bright		Guide
	PIP		3D
	Exit		Exit
	Text		Text
	Pre PG		Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	PG+		Ch +
	PG-		Ch -
	Vol+		Vol +
	Vol-		Vol -


 








Originalfernbedienung Ersatzfernbedienung

	Menu/Set		Menu
	V.Size		Eject
	MTS		Media
	Sound		Dual
	Picture		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Time		AV
	Still		Options





Originalfernbedienung Ersatzfernbedienung

 Red/Erase	 Red
 Green/Skip	 Green
 Yellow/Insert	 Yellow
 Blue/Replace	 Blue
 PG Info	 Info

Originalfernbedienung Ersatzfernbedienung

