




 
 

 


 


 


 

 



 









 

 
 
 

 
 
 
 
 
 
 


 
 
 
 
 

 








 
 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Select Drive		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Del		3D
	Input Select		AV
	CH/Page+		Ch +
	CH/Page-		Ch -
	Cast Vieta		Smart

Originalfernbedienung Ersatzfernbedienung

	Prog/Check		Sleep
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause		Pause
	Play/x1.3		Play
	Rec		Rec
	Direct Tv Rec		TV/R
	i/Status		Info
	Exit		Exit
	Direct Navigator/Pop-Up		D. Menu
	Function Menu		Menu
	Guide		Guide
	Up		Up
	Down		Down



