



 

 
 

 
 

 



 
 


 
 
















Originalfernbedienung Ersatzfernbedienung

	INFO [i+]/REVEAL [?]		Info / Angle
	[+]		Zoom / Size
	POWER		Power
	<<		<< / Tune-
	PLAY		Play / Slow
	PAUSE		Pause / Step / Freeze
	>>		>> / Tune+
	SYNC MENU		D.Menu / Top
	STOP		Stop / Hold
	THEATRE		Picture / Format
	DIGITAL		Display / Media
	ANALOG		Smart / List
	SUBTITLE [...]		Subtitle / EQ
	AUDIO		Audio / Lang I/II
	GUIDE		Guide / EPG / -/--
	^		Up
	Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	<		Left
	OK		OK
	>		Right
	RETURN		Back / Return
	V		Down
	Tools		Setup / OPT /
	Menu		Menu / Home
	RED		Red / Netflix / Search
	GREEN		Green / APP / Repeat
	YELLOW		Yellow / YouTube / Repeat
	BLUE		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	TEXT [=]		Text / Goto
	0		0
	FAV		Shift + Fav / Marker / PC
	VOL+		Vol+
	CH+		CH+ / Page+
	VOL-		Vol-
	CH-		CH- / Page-
	MUTE		Mute / Dimmer
	RECALL		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

