










 



 





 



 



 





 

 




 



 

 





 


 

 

 

 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------------|
|  | Power |  | Power |
|  | Sleep |  | Shift + Power |
|  | Mute |  | MUTE |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/-- / 10+ |  | -/-- / EPG |
|  | Recall |  | BACK |
|  | Source |  | SRC |
|  | -[/]- / P.STD |  | V-FOR |

 
 
 

 

 

 
 
 

 
 
 

 
 
 

 
 
 
 
 
 
 

 



 
 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-------------------|
|  | -[]- / S.STD |  | Shift + Audio |
|  | Menu / ATV |  | MENU |
|  | Up |  | UP |
|  | Down |  | DOWN |
|  | Right |  | RIGHT |
|  | Left |  | LEFT |
|  | OK |  | OK |
|  | Vol + |  | VOL + |
|  | Vol - |  | VOL - |
|  | Program + |  | CH + |
|  | Program - |  | CH - |
|  | Info |  | INFO |
|  | Setup / DVD / |  | VOD |
|  | I/II |  | Audio |
|  | [/ =] / Text |  | TEXT |
|  | Open / Close |  | Shift + P/C / FAV |
|  | Play |  | Play |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------------------|---|----------------------|
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | I<< |  | First |
|  | >>I |  | Last |
|  | << |  | Rewind |
|  | >> |  | Fast Forward |
|  | [=x] / Exit |  | EXIT |
|  | [=♦] / Title / EPG |  | Shift + -/- / EPG |
|  | [=+] / Menu / FAV |  | P/C / FAV |
|  | [=i] / Goto / Tv/R |  | TV/R |
|  | [=?] / Slow Sub. |  | OPT+ |
|  | [=o] / Repeat / Timer |  | WIDE |
|  | [=] / Subtitle |  | Subt. |
|  | Red |  | Red (A) |
|  | Green |  | Green (B) |
|  | Yellow |  | Yellow (C) |
|  | Blue |  | Blue (D) |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

