
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Mute		Mute
	Mode		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Back		Back
	Nicam/A2		Dual

Originalfernbedienung Ersatzfernbedienung

	TXT/MIX		Text
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	>>/Index		>>
	<</Hold		<<
	I<<		I<<
	>>I		>>I
	Cancel		Exit
	Menu		Menu
	DTV/Radio		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	CH+		Ch +
	CH-		Ch -
	FAV		Pre Ch
	EPG		Guide
	Info		Info
	List		List
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Size		Format
	Reveal		3D
	Subtitle		Subt
	Subpage		AV
	FAV+		Shift + Ch +


 



 

 
 
 
 




 
 
Originalfernbedienung Ersatzfernbedienung

	FAV-		Shift + Ch -


 






Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute
[ I ]/Menu		Menu
Exit		Exit
Source		AV
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Subtitle		Subt
Text		Text

Originalfernbedienung Ersatzfernbedienung

Vol+		Vol +
Vol-		Vol -
CH+		Ch +
CH-		Ch -
Up		Up
Down		Down
Right		Right
Left		Left
OK		Ok
Recall		Back
Info		Info
EPG		Guide
Freeze		Options
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue





Originalfernbedienung   Ersatzfernbedienung   Originalfernbedienung   Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Audio	SOUND DUAL		Dual
I<</[≡+]	◀◀		I<<
>>I/[≡..]	▶▶		>>I
[≡i]	HOME SMART		Smart
Play	PLAY MODE ▶		Play
Pause	⏸		Pause
Stop	◻		Stop
REP/Rec	REC MODE ◻		Rec
<</[≡o]	◀◀		<<
>>/[≡?]	▶▶		>>
FAV	FAV PRE-CH		Pre Ch

