





 






**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Power		Power
	Audio		Audio / Lang I/II
	O/Pop-Up-M		Smart / List
	→[ ]←/Zoom		Zoom / Size
	Sound		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	0/AV		AV / Input / RDS

**Originalfernbedienung    Ersatzfernbedienung**

	EPG/Repeat		Shift + Green / APP / REPEAT
	EPG/Repeat		Guide / EPG / -/-
	Assist		Display / Media
	PIP/[ ]		Picture / Format
	Text/Disc-M		D.Menu / Top
	Text/Disc-M		Text / Goto
	Menu		Menu / Home
	End		Exit / Cancel / Clear
	Info		Info / Angle
	Vol+		Vol+
	P+		CH+ / Page+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol-		Vol-









**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	O/Pop-Up-M		Smart / List
	→[ ]←/Zoom		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	0/AV		AV / Input / RDS
	EPG/Repeat		Shift + Green / APP / Repeat
	EPG/Repeat		Guide / EPG / -/--
	Assist		Display / Media

**Originalfernbedienung    Ersatzfernbedienung**

	PIP/[ ]		Picture / Format
	Text/Disc-M		D.Menu / Top
	Text/Disc-M		Text / Goto
	Menu		Menu / Home
	End		Exit / Cancel / Clear
	Info		Info / Angle
	P+		CH+ / Page+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/Marker		Blue / Prime Video / Random









**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	O/Pop-Up-M		Smart / List
	→[ ]←/Zoom		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		AV / Input / RDS
	0/AV		0
	EPG/Repeat		Shift + Green / APP / Repeat
	EPG/Repeat		Guide / EPG / -/--
	Assist		Display / Media

**Originalfernbedienung    Ersatzfernbedienung**

	PIP/[ ]		Picture / Format
	Text/Disc-M		D.Menu / Top
	Text/Disc-M		Text / Goto
	Menu		Menu / Home
	End		Exit / Cancel / Clear
	Info		Info / Angle
	P+		CH+ / Page+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/Marker		Blue / Prime Video / Random





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Blue/Marker		Fav / Marker / PC
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec/HDMI	+  + 0	Shift + 0
	Rec/HDMI		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

