

 









 







 





 
 
 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Tuner/Band		Green
	Auto/Mono		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	CD		Yellow
	Play		Play







Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Program		Shift + Sleep
	Cancel		Exit
	Deck 1/2		Blue
	> Deck 1/2		Right
	< Deck 1/2		Left
	Stop Deck 1/2		Ok
	<< Deck 1/2		<<
	>> Deck 1/2		>>
	Rec Pause		Rec
	Flat		Options
	EQ Space		Dual
	Balance R		Ch +
	Balance L		Ch -





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute

Originalfernbedienung Ersatzfernbedienung