



Originalfernbedienung Ersatzfernbedienung






 






 
 

 
	Power Tv		Shift + Power
	Power		Power
	Review		Setup / OPT /
	Tv/VCR		TV/Radio /
	Tv/VCR Tv		Shift + TV/Radio / Program
	Audio		Audio / Lang I/II
	Mute Tv		Shift + Mute / Dimmer
	--:--		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	X		Exit / Cancel / Clear
	0		0
	Timer		Sleep / Timer
	Start Debut +		Green / APP / Repeat
	Start Debut -		Red / Netflix / Search
	Stop Fin +		Blue / Prime Video / Random
	Stop Fin -		Yellow / YouTube / Repeat
	Date+		Vol+
	Date-		Vol-
	PR+		CH+ / Page+
	PR-		CH- / Page-
	Prog		D.Menu / Top
	Timer/?		Shift + Sleep / Timer
	I/II		Display / Media
	30 Sec/>>>		Back / Return
<< button"/>	<<		<< / Tune-
	Play		Play / Slow





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	TUNE+ >> / Tune+		
	REC MODE Rec / Rec Mode		
	HOLD Stop / Hold		
	STEP-FREEZE Pause / Step / Freeze		
	HOME MENU Menu / Home		
	OK OK		
	Up Up		
	SHIFT + CH PAGE Shift + CH+ /		
	Left Left		
	SHIFT + VOL Shift + Vol-		
	PRESET- I<< / Preset-		
	PRESET+ >>I / Preset+		
	SHIFT + VOL Shift + Vol+		
	Right Right		
	Down Down		
	SHIFT + CH PAGE Shift + CH- /		

