


 
 

 

 


 
 

 

 








 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Del		Pre Ch
	Input Select		AV
	Select Drive		D. Menu
	Cast Vieta		Media
	Function Menu		Menu
	Direct Navigator		List

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	Return		Back
	Option		Options
	Exit		Exit
	i / Status		Info
	Pause / Pause Live Tv		Pause
	Stop		Stop
	Play/x1.3		Play
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Prog/Check		Sleep
	OK		Ok
	Up		Up
	Down		Down
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	Direct Tv Rec		TV/R
	Rec Mode	+	Shift + Rec
	Ext Link		Smart
	Audio		Dual
	[≡◆] / STTL		Subt
	[≡] / Text		Text
	Display	+	Shift + Info
	Chapter		Format
	Time Slip		3D
	CH/Page+		Ch +
	CH/Page-		Ch -

Originalfernbedienung Ersatzfernbedienung

	Vol + Tv		Vol +
	Vol - Tv		Vol -
	AV / Input Tv	+	Shift + AV
	CH + Tv	+	Shift + Ch +
	CH - Tv	+	Shift + Ch -
	Power Tv	+	Shift + Power
	Manual Skip +60s	+	Shift + Pre Ch
	Manual Skip -10s	+	Shift + Guide

