


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	M		Menu
	E		Exit
	i		Info
	Rec		Rec
	Pause		Pause
	OK		Ok

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Stop		Stop
	Play		Play
	>>		>>
	Mute/Timer		Mute
	[]		Subt
	T		TV/R
	Guide/000		Guide
	V≡/LP		Format




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[]		Subt
	Mute/Timer		Mute
	Guide/000		Guide
	V= / LP		Format
	[*] / SV		3D
	Sound		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	M		Menu
	E		Exit
	T		TV/R
	i		Info
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Stop		Stop
	Play		Play
	>>		>>




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[]		Subt
	Mute/Timer		Mute
	Guide/000		Guide
	V= / LP		Format
	[*] / SV		3D
	Sound		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	M		Menu
	E		Exit
	T		TV/R
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Stop		Stop
	Play		Play
	>>		>>
	Pause		Pause

