



 


 
 

 

 
 

 

 
 
 



 

 
 
 
 
 

 
 













 

 

 


 
 

 
 
 
 
 
 
 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/R
	Subtitle		Subt
	AD/PIP/*		Shift + Subt
	TV/PC		Media
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List

Originalfernbedienung Ersatzfernbedienung

	Q.View		Smart
	FAV		Pre Ch
	Guide		Guide
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Text		Text
	Info		Info
	T.Opt		Shift + Options
	Settings		Options
	Q.Menu		Menu
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down





	Originalfernbedienung	Ersatzfernbedienung		Originalfernbedienung	Ersatzfernbedienung
	Right				
	Left				
	OK				
	Simplink				
	Rec/*				
	Stop				
	<<				
	Play				
	Pause				
	>>				
	Red				
	Green				
	Yellow				
	Blue				

