
 

 





 

 





 

 

 







 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Infos		Info / Angle
	Vol +		Vol+
	Mute		Mute / Dimmer
	Prog +		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol -		Vol-
	Format		Picture / Format
	Prog -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	Media		Display / Media
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Back		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear



