

















 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Preview		Fav / Marker / PC
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Return/Title		Back / Return
	0		0
	Display		Display / Media
	I<<		I<< / Preset-
	>>I		>>I / Preset+

**Originalfernbedienung    Ersatzfernbedienung**

	Play		Play / Slow
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Disc Menu		D.Menu / Top
	Down		Down
	System Menu		Menu / Home
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Zoom		Zoom / Size
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Audio		Audio / Lang I/II

