 


 

 



 

 
 
 

 

 
 
 

 






 

 

 




 
 
 

 

 
 

 

 



 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	-/--		Guide
	P +		Ch +
	P -		Ch -
	V +		Vol +
	V -		Vol -

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	TV		TV/R
	Back		Back
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I-II		Dual
	Text		Text
	i		Info
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	Rec		Rec
	Red		Red





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Green		Green
	Yellow		Yellow
	Blue		Blue

