





















 














**Originalfernbedienung    Ersatzfernbedienung**









 



 

 

	P100		Display / Media
	Power		Power
	REV		<< / Tune-
	Doub		Audio / Lang I/II
	1		1
	2		2
	3		3
	Hold		Stop / Hold
	4		4
	5		5
	6		6
	Sub		Subtitle / EQ
	Update		D.Menu / Top
	7		7
	8		8
	9		9
	Mix		Text / Goto

**Originalfernbedienung    Ersatzfernbedienung**

	AV		AV / Input / RDS
	0		0
	-/--		Guide / EPG / -/--
	P+		CH+ / Page+
	Up		Up
	Mute		Mute / Dimmer
	TV/TXT		TV/Radio /
	Menu		Menu / Home
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Swap		Back / Return
	P-		CH- / Page-
	Down		Down
	16:9		Picture / Format



**Originalfernbedienung Ersatzfernbedienung**

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Violet		Smart / List
	[ ]		Setup / OPT /
	♪		Sound / Title
	PP		Shift + Smart / List

**Originalfernbedienung Ersatzfernbedienung**