


 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|--|--------------------------|
|  | Standby |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Aspect |  | Shift + Picture / Format |
|  | Recall |  | Back / Return |
|  | TVG |  | Guide / EPG / -/-- |
|  | Subtitle |  | Subtitle / EQ |
|  | Audio |  | Audio / Lang I/II |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------------------------|
|  | Display |  | Display / Media |
|  | Tv/Radio |  | TV/Radio / |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | FAV |  | Fav / Marker / PC |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | Rec |  | Rec / Rec Mode |
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | Media |  | Shift + Display / Media |
|  | Source |  | AV / Input / RDS |



