




 
 



 





 


 

 












 
 






 
 

 



 








 
 


 




 

 
 

 
 
 
 
 





 
 
 

 
 
 
 
 
 

 

 




 

 
 
Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	3D		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ECO		Shift + 3D
	Source		AV
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Info		Info
	P +		Ch +
	P -		Ch -
	W		Shift + Smart
	Smart TV		Smart
	@		Media
	Menu		Menu
	Up		Up
	Down		Down
	Right / Zoom +		Right
	Left / Zoom -		Left
	OK		Ok
	Back		Back
	Exit		Exit
	Option		Options
	USB		Shift + Media
	TV		TV/R




Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Guide		Guide
	FAV		Pre Ch
	List		List
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Lang		Dual
	Subtitle		Subt
	Text		Text
	I<		I<<
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	>I		>>I
	<<		<<

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	>>		>>

