






 

 



 

 





 

 











 














 
 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|---------------|
|  | Power |  | Power |
|  | Sleep |  | Sleep |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/-- |  | Shift + Guide |
|  | Recall |  | Back |
|  | Source |  | AV |
|  | P.Std |  | Format |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------------|---|--------------|
|  | S.Std |  | Dual |
|  | Menu ATV |  | Menu |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Vol + |  | Vol + |
|  | Vol - |  | Vol - |
|  | Program + |  | Ch + |
|  | Program - |  | Ch - |
|  | Freeze / Eject |  | Eject |
|  | Info / Display |  | Info |
|  | Menu DVB |  | D. Menu |
|  | I / II |  | Shift + Dual |
|  | TTX / Play / Pause |  | Text |
|  | TTX / Play / Pause |  | Play |



