



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Nicam		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	CH+		CH+ / Page+
	Vol+		Vol+
	Info		Info / Angle
	CH-		CH- / Page-
	Vol-		Vol-
	Media		Display / Media
	Freeze		Shift + Pause / Step /
	Aspect		Shift + Picture / Format
	EPG		Guide / EPG / -/--
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down





**Originalfernbedienung Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	Text		Text / Goto
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop/Hold		Stop / Hold
	<<		<< / Tune-
	Size		Zoom / Size
	>>/Reveal		>> / Tune+
	I<</Index		I<< / Preset-
	>>I/Subpage		>>I / Preset+
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Rec		Rec / Rec Mode
	R.List		Smart / List
	TV/Radio		TV/Radio /
	Timeshift		D.Menu / Top
	Red		Red / Netflix / Search

**Originalfernbedienung Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

