


Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	AV		AV
	Tv/Rad		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	TXT		Text
	Back		Back

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Audio		Dual
	Info		Info
	Sub		Subt
	List		List
	CH+		Ch +



