









 









 

 
 










 
 

 


 
 

 



 




 







 

 

 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Video Out		AV
	<<		<<
	>>		>>
	Pause		Pause










 

 

 





 
Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Play		Play
	I<<		I<<
	>>I		>>I
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu DVD		Menu
	Setup		Options
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Language		Dual
	Angle		TV/R
	Subtitle		Subt





Originalfernbedienung Ersatzfernbedienung

	Progressive Scan		Format
	Repeat		Text
	Random		3D
	Zoom		Shift + Eject
	OSD		Pre Ch
	A-B		List
	PBC		Back
	L/R		Info
	Program		Sleep
	Sub-Menu		D. Menu

Originalfernbedienung Ersatzfernbedienung

