



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	M		Menu
	[i]		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	-/--		Guide
	PP		Back
	P/CH+		Ch +
	P/CH-		Ch -
	P<P		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	I-II		Dual
	TV		TV/R
	AV		AV
	Red/Sound		Red
	Green/Picture		Green
	Yellow/Feature		Yellow
	Blue/Install		Blue
	[≡]		Text





Originalfernbedienung Ersatzfernbedienung

	[≡o]	HOME SMART	Smart
	[≡+]	PICTURE FORMAT	Format
	[≡x]/[· ·]	ECO 3D	3D
	[/≡]/[*]	AD SUBT	Subt
	[≡♦]/[+]	SETTINGS OPT	Options
	[≡?]/PC	APP MEDIA	Media
	[≡i]	DISC NAV LIST	List

Originalfernbedienung Ersatzfernbedienung

