


 

 

 

 

 

 
 


 


 
 


 

 
 
 
 

 






 
 

 

 









 
 

 
 
 



 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | PIP/Audio |  | 3D |
|  | [<>] |  | Format |
|  | ? |  | Smart |
|  | Mute |  | Mute |
|  | Z/Disc Menu |  | Menu |
|  | i/OSD |  | Info |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------|
|  | TXT |  | Text |
|  | TV-G |  | Guide |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Red/Image/I> |  | Red |
|  | Green/Timer |  | Green |
|  | Yellow/@ |  | Yellow |
|  | Blue/Sound |  | Blue |
|  | Play |  | Play |
|  | Pause |  | Pause |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------|--|------|
| | Stop | | Stop |
| | << | | << |
| | >> | | >> |
| | I< | | I<< |
| | >I | | >>I |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |




 

 

 

 

 

 
 


 

 


 
 


 

 
 
 
 

 
Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

 
 








 
 








 

 



 


 
 
 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | PIP/Audio |  | 3D |
|  | [<>] |  | Format |
|  | ? |  | Smart |
|  | i/OSD |  | Info |
|  | TXT |  | Text |
|  | TV-G |  | Guide |




 

 

 

 

 

 
 


 

 


 
 


 


 

 
 
 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------|
|  | Z/Disc Menu |  | Menu |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Red/Image/I> |  | Red |
|  | Green/Timer |  | Green |
|  | Yellow/@ |  | Yellow |
|  | Blue/Sound |  | Blue |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Stop |  | Stop |

 
 
 







 

 
 








 

 

 




 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | PIP/Audio |  | 3D |
|  | [<>] |  | Format |
|  | ? |  | Smart |
|  | Mute |  | Mute |
|  | i/OSD |  | Info |
|  | TXT |  | Text |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------|
|  | Z/Disc Menu |  | Menu |
|  | TV-G |  | Guide |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Red/Image/I> |  | Red |
|  | Green/Timer |  | Green |
|  | Yellow/@ |  | Yellow |
|  | Blue/Sound |  | Blue |
|  | Play |  | Play |
|  | Pause |  | Pause |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------|---|------|
|  | Stop |  | Stop |
|  | << |  | << |
|  | >> |  | >> |
|  | I< |  | I<< |
|  | >I |  | >>I |




 

 



 









 


 




 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |









 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | PIP/Audio |  | 3D |
|  | [<>] |  | Format |
|  | ? |  | Smart |
|  | i/OSD |  | Info |
|  | TXT |  | Text |
|  | TV-G |  | Guide |


 


 



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------|
|  | Z/Disc Menu |  | Menu |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Red/Image/I> |  | Red |
|  | Green/Timer |  | Green |
|  | Yellow/@ |  | Yellow |
|  | Blue/Sound |  | Blue |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Stop |  | Stop |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----|---|----|
|  | << |  | << |
|  | >> |  | >> |
|  | < |  | << |
|  | > |  | >> |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

