

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	M Menu		Menu / Home
	[ i ] Info		Info / Angle
	OK		OK
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



Originalfernbedienung Ersatzfernbedienung

	P < P		Display / Media
	0		0
	Aspect		Picture / Format
	Swap		Back / Return
	P - / CH -		CH- / Page-
	P + / CH +		CH+ / Page+
	Vol -		Vol-
	Vol +		Vol+
	Mute		Mute / Dimmer
	I - II		Audio / Lang I/II
	[ TV ]		Smart / List
	Source		AV / Input / RDS
	Red / PIP		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto





Originalfernbedienung   Ersatzfernbedienung

	Timer		Sleep / Timer
	Hold		Stop / Hold
	Cancel		Exit / Cancel / Clear
	Mix	 + 	Shift + Text /
	Size		Zoom / Size
	Help		Setup / OPT /
	Index		D.Menu / Top

Originalfernbedienung   Ersatzfernbedienung