





 




 
 

 






 
 









 












 


 
 












**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Tv Power	 + 	Shift + Power
	Source		AV
	Auto Power		Sleep
	Speaker		Pre Ch
	Tv Source	 + 	Shift + AV
	Repeat		Text
	Any net		Media
	Soundshare		Dual
	Tv Vol+	 + 	Shift + Vol +
	Tv Vol-	 + 	Shift + Vol -
	Tv CH+		Ch +
	Tv CH-		Ch -
	Audio Sync+		3
	Audio Sync-		6
	Tv Mute	 + 	Shift + Mute
	Tv Info		Info

**Originalfernbedienung    Ersatzfernbedienung**

	Tv Pre-CH		Back
	Dimmer		0
	I<<		I<<
	Stop		Stop
	Play		Play
	Pause		Pause
	>>I		>>I
	Sound Effect		Menu
	Smart Volume		Smart
	3D Sound Plus		3D
	DRC		Subt
	Right S/W Level		Right
	Left S/W Level		Left
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

