

 
 

 
 
 
 
 
 
 
 


 
 
 
 



 
 
 
 

 



 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / AV		0
	0 / AV		AV
	i		Info
	Mute		Mute
	Up / P+		Ch +
	Up / P+		Up
	Down / P-		Ch -


 





 
Originalfernbedienung Ersatzfernbedienung

	Down / P-		Down
	Right / Vol +		Vol +
	Right / Vol +		Right
	Left / Vol -		Vol -
	Left / Vol -		Left
	OK		Ok
	Aux		Media
	Txt		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Contrast -		I<<
	Contrast +		>>I
	Brightness -		<<
	Brightness +		>>





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Rec		Rec
	Stop		Stop
	Pause		Pause
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	>>		>>
	>>		>>
	<<		<<
	<<		<<
	Play		Play
	Play		Ok
	Aux		Media
	Text		Text

Originalfernbedienung Ersatzfernbedienung

