

 





 
 
 


 
 
 

 

 



 

 
 
 

 

 
 
 
 









 
 

 

 
 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	Digital/Analog		3D
	TV/Radio		TV/R
	Exit		Exit
	EXT.Box Menu		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]/[?]		Info










 





 




 
 
 



 






 
Originalfernbedienung Ersatzfernbedienung

	[≡]		Text
	Google Play		Shift + Smart
	Netflix		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Guide		Guide
	Action Menu		Menu
	APPS		Shift + Media
	Back		Back
	TV		Options
	Home		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left



 
 




Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Recall		Pre Ch
	Prog+		Ch +
	Prog-		Ch -
	Audio		Dual
	<<		<<
	Play		Play
	>>		>>
	I<<		I<<
	Pause		Pause
	>>I		>>I
	Rec		Rec
	Stop		Stop
	[...]		Subt

Originalfernbedienung Ersatzfernbedienung

	Help		Format
	Title List		List

