



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Source		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	P Mode		Format
	S Mode		Dual
	Freeze		Smart
	TXT		Text
	Mix / Fav List		Pre Ch
	Size / Subtitle		Subt
	Cancel / Audio		Shift + Dual
	Record		Rec
	<< / Index		<<
	>> / Hold		>>
	I<< / Reveal		I<<

Originalfernbedienung Ersatzfernbedienung

	>>I / Subpage		>>I
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Play/Pause / Timeshift		Play
	Play/Pause / Timeshift		Pause
	Stop / EPG		Stop
	Stop / EPG		Guide
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	TV / Radio		TV/R
	CH +		Ch +





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
CH -	CH -		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
DISPLAY	Info		
RECALL	Back		

