



Originalfernbedienung Ersatzfernbedienung

| | | | |
|----------|----------|----------------|--------|
| M.SCAN | M.Scan | HOME SMART | Smart |
| FADER | Fader | MUTE | Mute |
| CONTINUE | Continue | AD SUBT | Subt |
| SHUFFLE | Shuffle | PICTURE FORMAT | Format |
| PROGRAM | Program | PROG SLEEP | Sleep |
| 1 | 1 | 1 | 1 |
| 2 | 2 | 2 | 2 |
| 3 | 3 | 3 | 3 |
| 4 | 4 | 4 | 4 |
| 5 | 5 | 5 | 5 |
| 6 | 6 | 6 | 6 |
| 7 | 7 | 7 | 7 |
| 8 | 8 | 8 | 8 |
| 9 | 9 | 9 | 9 |
| 10 | 10 | 0 | 0 |
| >10 | >10 | -/-- GUIDE | Guide |
| A.SPACE | A.Space | SEARCH TV/R | TV/R |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|------------------|-----------------|-------------|-------|
| TIME | Time | TIMER AV | AV |
| A-B | A-B | ECO 3D | 3D |
| REPEAT | Repeat | REPEAT TEXT | Text |
| ▶ | Play | PLAY MODE ▶ | Play |
| ⏸ | Pause | ⏸ | Pause |
| ■ | Stop | ■ | Stop |
| ⏮ AMS | I<< AMS | ⏮ | I<< |
| AMS ⏭ | AMS >>I | ⏭ | >>I |
| ⏪ | << | ⏪ | << |
| ⏩ | >> | ⏩ | >> |
| LINE OUT LEVEL + | Line Out Level+ | + CH | Ch + |
| LINE OUT LEVEL - | Line Out Level- | CH - | Ch - |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

