 
 

 




Originalfernbedienung Ersatzfernbedienung


 






 



 


 

 




 
 




 

	Power		Power
	Display		Shift + Info
	Nicam/A2		List
	Mute		Mute
	PMode		Shift + Format
	SMode		Shift + Dual
	Sleep		Sleep
	Aspect		3D
	LCD-Menu		Menu
	DVB-Menu		D. Menu
	Source		AV
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok

Originalfernbedienung Ersatzfernbedienung

	Ch+		Ch +
	Ch-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Hold		Media
	Red		Red





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Green		Green				
	Yellow		Yellow				
	Cyan		Blue				
	Index		Smart				
	Size		Format				
	Reveal		Options				
	Subpage		Eject				
	Tv/Radio		TV/R				
	Lang		Dual				
	Page-		I<<				
	Page+		>>I				
	Subtitle		Subt				
	Epg		Guide				
	Fav		Pre Ch				
	Info		Info				

