 

 

 
 


 
 

 
 


 


 






 
 
 


 

 
 

 


 

 
 
 
 

 
 
 
 
 
 
 

 
 
 







 


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input Select		AV
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Prog+		Ch +
	Prog-		Ch -
	Satellite Link		Media
	Mode		Smart

Originalfernbedienung Ersatzfernbedienung

	Timer/Prog.		Sleep
	Time Slip		Guide
	Setup		Options
	Audio		Dual
	Clear		Exit
	Chapter Mark		List
	Disc Menu		D. Menu
	Top Menu		Menu
	Return		Back
	Display		Info
	Up		Up
	Enter		Ok
	Down		Down
	Right		Right
	Left		Left
	I<< Skip		I<<
	Skip >>I		>>I


 




Originalfernbedienung   Ersatzfernbedienung

	<<		<<
	>>		>>
	Play		Play
	Stop		Stop
	Pause		Pause
	HDD/DVD Rec		Rec
	Variable Replay		Format
	Variable Skip		3D
	>II/Adjust+		Shift + Right
	II</Adjust-		Shift + Left
	DVD		Blue
	HDD		Yellow
	AV Select		Red
	Rec Mode		Shift + Rec
	Search		TV/R
	Repeat		Text
	Dubbing		Subt

Originalfernbedienung   Ersatzfernbedienung

	1.3x/0.8x Play		Green
---	----------------	---	-------

