

 







 


 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Repeat		Text
	A-B	 + 	Shift + Text
	Open / Close		Eject
	N / P		TV/R
	Subtitle		Subt
	Angle		Format
	Language		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

**Originalfernbedienung    Ersatzfernbedienung**

	0		0
	10+		Guide
	Time		AV
	Setup		Options
	Title		Media
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	PBC		Smart
	Menu		Menu
	Vol -		Vol -
	Vol +		Vol +
	Zoom	 + 	Shift + Eject
	Return		Back
	L / R	 + 	Shift + Dual



