
 



 

 









 



 












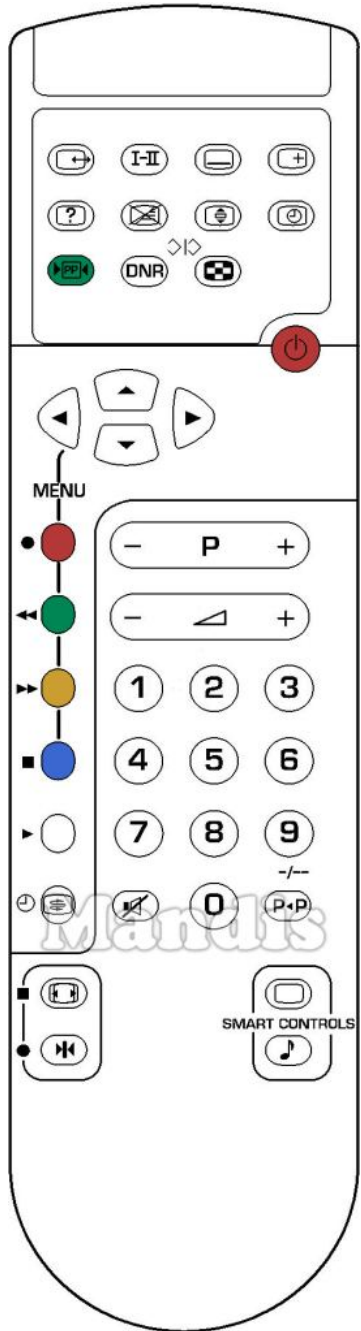

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------------|
|  | Power |  | Power |
|  | ><> |  | Shift + Menu |
|  | Source |  | AV |
|  | I - II |  | Dual |
|  | Subtitles |  | Subt |
|  | [i+] |  | Info |
|  | [?] |  | D. Menu |
|  | Mix |  | TV/R |
|  | Zoom |  | Eject |
|  | Time |  | Shift + AV |
|  | [PP] |  | Back |
|  | DNR |  | Options |
|  | Mosaic |  | Guide |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|----------------|
|  | Red / Menu |  | Red |
|  | Red / Menu |  | Shift + Format |
|  | Green / Menu |  | Green |
|  | Green / Menu |  | Shift + Dual |
|  | Yellow / Other |  | Yellow |
|  | Yellow / Other |  | Menu |
|  | Blue / OK |  | Blue |
|  | Blue / OK |  | Ok |
|  | Special Audio |  | Shift + Subt |
|  | Text |  | Text |
|  | P - |  | Ch - |
|  | P + |  | Ch + |
|  | Vol - |  | Vol - |
|  | Vol + |  | Vol + |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|--|--------------|
| | Power | | Power |
| | Time | | TV/R |
| | Zoom | | 3D |
| | Mix | | Text |
| | [?] | | Shift + Info |
| | [i+] | | Info |
| | Freeze/Rec | | Pause |
| | Format/Stop | | Format |
| | Source | | AV |
| | I-II | | Dual |
| | Up | | Up |
| | Down | | Down |
| | Right | | Right |
| | Left | | Left |
| | Rec | | Rec |
| | << | | << |
| | >> | | >> |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------|--|------------|
| | Stop | | Stop |
| | Play | | Play |
| | Timer | | Shift + AV |
| | P- | | Ch - |
| | P+ | | Ch + |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | -/- | | Guide |

