



Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	PP		Back / Return
	I / II		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Fav / Marker / PC
	P<P		Display / Media
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Info		Info / Angle
	Left		Left
	P +		Shift + CH+ /
	P +		CH+ / Page+
	Right		Right
	P -		Shift + CH- /
	P -		CH- / Page-
	Vol -		Vol-
	Vol +		Vol+
	Red / Sound		Red / Netflix / Search
	Green / Picture		Green / APP / Repeat
	Yellow / Feature		Yellow / YouTube / Repeat
	Blue / Install		Blue / Prime Video / Random
	TV		TV/Radio /
	AV		AV / Input / RDS
	Text		Text / Goto
	Mix		Shift + Text / Goto





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Timer		Sleep / Timer				
	Size		Zoom / Size				
	Cancel		Exit / Cancel / Clear				
	Hold		Stop / Hold				
	Help	 + 	Shift + Info / Angle				
	Index		OK				

