



Originalfernbedienung Ersatzfernbedienung

STANDBY	STANDBY		Power
CD	CD		1
TUNER	TUNER		2
AUX	AUX		4
PHONO	PHONO		5
DIGITAL	DIGITAL		7
MUTE	MUTE		Mute
VOLUME -	VOLUME -		Vol -
VOLUME -	VOLUME -		Down
VOLUME +	VOLUME +		Vol +
VOLUME +	VOLUME +		Up

Originalfernbedienung Ersatzfernbedienung

