


 





 




 




 

 


 
 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	CD/SD/USB		Smart
	AUX/BT		3D
	Radio		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Info
	*/Menu		Menu



Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Play		Play
	Pause		Pause
	Vol+		Vol +
	Vol-		Vol -
	Audio/DSC		Subt
	Back		Back
	X/INT		Options
	Stop		Stop
	Stereo		Dual
	Timer/Prog		Shift + Sleep
	Timer		AV
	WEC/NAP		Media





**Originalfernbedienung    Ersatzfernbedienung**

	Sleep		Sleep

**Originalfernbedienung    Ersatzfernbedienung**