


 

 







 

 

 



 
 




 



 




Originalfernbedienung Ersatzfernbedienung

	Guide		Guide / EPG / -/--
	Power		Power
	Eject		Eject / Surround
	Tv/Radio		TV/Radio /
	Red/Goto		Red / Netflix / Search
	Green/Angle		Green / APP / Repeat
	Yellow/Repeat		Yellow / YouTube / Repeat
	Blue/A-B		Blue / Prime Video / Random
	FAV		Fav / Marker / PC
	Text		Text / Goto
	Freeze/Hold		Shift + Pause / Step /
	D.Menu		D.Menu / Top
	Subtitle		Subtitle / EQ
	Zoom/Size		Zoom / Size
	Aspect		Shift + Picture / Format
	Subpage		Info / Angle
	Media		Shift + Display / Media

Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	D.Setup		Setup / OPT /
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	I<<		I<< / Preset-
	I>>/Index		I>> / Preset+
	Menu		Menu / Home
	Lang/Audio		Audio / Lang I/II
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Sleep		Sleep / Timer
	Down		Down



