










 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Muting		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<</<I/Slow/Tunin		<< / Tune-
	Tuning+/Slow		>> / Tune+
	I<</Preset-		I<< / Preset-
	>>I/Preset+		>>I / Preset+
	Bass Level		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Open/Close		Eject / Surround
	Band		Picture / Format
	Sleep		Sleep / Timer
	Tv/Video		TV/Radio /
	DVD Menu		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	DVD Setup		Setup / OPT /
	Name		Text / Goto
	AMP Menu		Menu / Home
	Up		Up
	Angle		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	Memory		Smart / List
	Vol-		Vol-
	Display		Display / Media
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
>10 button"/>	>10		Guide / EPG / -/--
	0		0
	Repeat		Green / APP / Repeat
	Play Mode	+	Shift + Play /
	Stereo/Mono	+	Shift + Audio / Lang I/II
	Function	+	Shift + Setup / OPT / Tools
	DVD Top Menu	+	Shift + Menu /
	Sound Field+	+	Shift + Vol+
	Night Mode	+	Shift + Smart / List
	Sound Field-	+	Shift + Vol-

Originalfernbedienung Ersatzfernbedienung

	Enter1	+	Shift + 1
	DVD Display	+	Shift + 2





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	Power Tv
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0/10
	-/--
	Enter
	Tv Vol+
	Tv CH+
	Tv Vol-
	Tv CH-
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide / EPG / -/--
	OK
	Vol+
	CH+ / Page+
	Vol-
	CH- / Page-

Originalfernbedienung Ersatzfernbedienung

