










 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Muting		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<</<I/Slow/Tunin		<< / Tune-
	Tuning+/Slow		>> / Tune+
	I<</Preset-		I<< / Preset-
	>>I/Preset+		>>I / Preset+
	Bass Level		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Open/Close		Eject / Surround
	Band		Picture / Format
	Sleep		Sleep / Timer
	Tv/Video		TV/Radio /
	DVD Menu		D.Menu / Top











 

 
 

 

















Originalfernbedienung Ersatzfernbedienung

	DVD Setup		Setup / OPT /
	Name		Text / Goto
	AMP Menu		Menu / Home
	Up		Up
	Angle		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	Memory		Smart / List
	Vol-		Vol-
	Display		Display / Media
	1		1
	2		2









Originalfernbedienung Ersatzfernbedienung











 

 

 

 

















	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	>10		Guide / EPG / -/--
	0		0
	Repeat		Green / APP / Repeat
	Play Mode		Shift + Play /
	Stereo/Mono		Shift + Audio / Lang I/II
	Function		Shift + Setup / OPT / Tools
	DVD Top Menu		Shift + Menu /
	Sound Field+		Shift + Vol+
	Night Mode		Shift + Smart / List
	Sound Field-		Shift + Vol-

Originalfernbedienung Ersatzfernbedienung

	Enter1		Shift + 1
	DVD Display		Shift + 2





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power Tv	 Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0/10	 0		
 -/--	 Guide / EPG / -/--		
 Enter	 OK		
 Tv Vol+	 Vol+		
 Tv CH+	 CH+ / Page+		
 Tv Vol-	 Vol-		
 Tv CH-	 CH- / Page-		

