



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Tv Power	+	Shift + Power
	Open/Close		Eject / Surround
	Tv Mute	+	Shift + Mute / Dimmer
	AV/Input Tv		AV / Input / RDS
	1		1
	2		2
	3		3
	PR/CH+ Tv	+	Shift + CH+ /
	4		4
	5		5
	6		6
	PR/CH- Tv	+	Shift + CH- /
	7		7
	8		8
	9		9
	Vol+ Tv		Vol+

**Originalfernbedienung    Ersatzfernbedienung**

	Clear	+	Shift + Exit / Cancel / Clear
	0		0
	Recall/Repeat/Tv/ Radio		TV/Radio /
	Vol- Tv		Vol-
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	I>>		I>> / Preset+
	Pause/Time Shift		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Home		Menu / Home
	Up		Up
	Info/Menu		Info / Angle
	Left		Left
	Enter		OK
	Right		Right



