
 

 




 



 

 









 


 












 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	EPG		Guide / EPG / -/--
	REP		TV/Radio /
	Mute		Mute / Dimmer
	Rec List		Shift + Rec / Rec Mode
	CH List		Smart / List
	Subtitle		Subtitle / EQ
	Eject		Eject / Surround
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

0	0	HDMI - BAT	0
↶	Recall	RETURN	Back / Return
FAV	Fav	PC FAV MARKER	Fav / Marker / PC
▲	Vol +	+	Vol+
PICTURE	Picture	FORMAT	Picture / Format
NICAM/A2	Nicam / A2	LANG / I / II	Audio / Lang I/II
▲	CH +	+	CH+ / Page+
▼	Vol -	-	Vol-
SOUND	Sound	TITLE	Sound / Title
SLEEP	Sleep	TIMER	Sleep / Timer
▼	CH -	-	CH- / Page-
Red	Red	NETFLIX	Red / Netflix / Search
Green	Green	APP	Green / APP / Repeat
Yellow	Yellow	YouTube	Yellow / YouTube / Repeat
SCREEN	Blue / Screen	Prime Video	Blue / Prime Video / Random
TV/TXT	Setup / TV/Txt	OPT-TOOLS	Setup / OPT /
CANCEL	D-Menu /	TOP MENU	D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

REVEAL	Title / Reveal	SHIFT +	TITLE	Shift + Sound / Title
PRO	PRO	SHIFT +	MEDIA	Shift + Display / Media
HOLD	LAN / Hold	SHIFT +	LIST	Shift + Smart / List
SIZE	Size / A-B	SIZE	ZOOM	Zoom / Size
SUBPAGE	Goto / Subpage	GOTO	TEXT	Text / Goto
INDEX	Index / Slow	ANGLE	INFO	Info / Angle

Cancel Menu

