

 


 







 

 

 

 










 


 













 

 










Originalfernbedienung Ersatzfernbedienung

|   |          |   |                        |
|---|----------|---|------------------------|
|    | Power    |    | Power                  |
|    | EPG      |    | Guide / EPG / -/--     |
|    | REP      |    | TV/Radio /             |
|    | Mute     |    | Mute / Dimmer          |
|    | Rec List |    | Shift + Rec / Rec Mode |
|    | CH List  |    | Smart / List           |
|    | Subtitle |    | Subtitle / EQ          |
|    | Eject    |    | Eject / Surround       |
|    | Rec      |    | Rec / Rec Mode         |
|   | Stop     |   | Stop / Hold            |
|  | I<<      |  | I<< / Preset-          |
|  | >>I      |  | >>I / Preset+          |
|  | Pause    |  | Pause / Step / Freeze  |
|  | Play     |  | Play / Slow            |
|  | <<       |  | << / Tune-             |
|  | >>       |  | >> / Tune+             |
|  | Source   |  | AV / Input / RDS       |

Originalfernbedienung Ersatzfernbedienung

|   |         |   |                       |
|---|---------|---|-----------------------|
|    | Up      |    | Up                    |
|    | Display |    | Display / Media       |
|    | Left    |    | Left                  |
|    | OK      |    | OK                    |
|    | Right   |    | Right                 |
|    | Menu    |    | Menu / Home           |
|    | Down    |    | Down                  |
|    | Exit    |    | Exit / Cancel / Clear |
|    | 1       |    | 1                     |
|   | 2       |   | 2                     |
|  | 3       |  | 3                     |
|  | 4       |  | 4                     |
|  | 5       |  | 5                     |
|  | 6       |  | 6                     |
|  | 7       |  | 7                     |
|  | 8       |  | 8                     |
|  | 9       |  | 9                     |





## Originalfernbedienung    Ersatzerfernbedienung

|  |                |  |                             |
|--|----------------|--|-----------------------------|
|  | 0              |  | 0                           |
|  | Recall         |  | Back / Return               |
|  | Fav            |  | Fav / Marker / PC           |
|  | Vol +          |  | Vol+                        |
|  | Picture        |  | Picture / Format            |
|  | Nicam / A2     |  | Audio / Lang I/II           |
|  | CH +           |  | CH+ / Page+                 |
|  | Vol -          |  | Vol-                        |
|  | Sound          |  | Sound / Title               |
|  | Sleep          |  | Sleep / Timer               |
|  | CH -           |  | CH- / Page-                 |
|  | Red            |  | Red / Netflix / Search      |
|  | Green          |  | Green / APP / Repeat        |
|  | Yellow         |  | Yellow / YouTube / Repeat   |
|  | Blue / Screen  |  | Blue / Prime Video / Random |
|  | Setup / TV/Txt |  | Setup / OPT /               |
|  | D-Menu /       |  | D.Menu / Top                |

Cancel

Menu

## Originalfernbedienung    Ersatzerfernbedienung

|  |                |  |                         |
|--|----------------|--|-------------------------|
|  | Title / Reveal |  | Shift + Sound / Title   |
|  | PRO            |  | Shift + Display / Media |
|  | LAN / Hold     |  | Shift + Smart / List    |
|  | Size / A-B     |  | Zoom / Size             |
|  | Goto / Subpage |  | Text / Goto             |
|  | Index / Slow   |  | Info / Angle            |

