


 


 


 


 
 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|---------|
|  | Power |  | Power |
|  | [≡?] |  | Dual |
|  | [≡◆]/[+]/Wide |  | 3D |
|  | [≡i]/Guide |  | Guide |
|  | [i]/Info |  | Info |
|  | [≡o] |  | Subt |
|  | [≡+]/[X] |  | Format |
|  | [≡x]/[⋯] |  | Options |
|  | [/≡]/[*] |  | Smart |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------------|
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | PP |  | Pre Ch |
|  | [≡] |  | Text |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | P/CH+ |  | Ch + |
|  | P/CH- |  | Ch - |
|  | P<P/Swap |  | Back |
|  | TV/DTV |  | TV/R |
|  | AV/Source |  | AV |
|  | Menu |  | Menu |
|  | -/-- |  | Shift + Guide |
|  | Exit |  | Exit |
|  | Up |  | Up |
|  | Down |  | Down |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|---|---------------------|---|---------------------|
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK/Select |  | Ok |
|  | Red/↑ |  | Red |
|  | Green/↓ |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

