



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Home		Smart
	Menu/Disc		Menu
	Options		Options
	Back		Back
	Stop		Stop
	Play		Play
	Pause		Pause
	I<		I<<
	>I		>>I
	>>		>>
	<<		<<
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Subtitle		Subt
	Goto		Guide
	Audio		Dual
	[<>]		Format
	Volume		Media
	Repeat/Repeat		Text

